

## 101-LXX-SS INSTALLATION & OPERATION INSTRUCTIONS



41041 Black Bayou Rd, Gonzales, Louisiana, USA 70737  
Phone (225) 644-5255 FAX (225) 644-3975  
www.geniefilters.com sales@geniefilters.com



© 2006 A+ Corporation, LLC. All rights reserved.

Revision 06.2006



Slowly open the supply pressure so that the minimum differential required to shut-off the Liquid Block™ is not met or exceeded.

- Remove all sources of pressure.
- Disconnect the Model 101 from the sample system.
- Remove and discard the four Allen cap screws, membrane, membrane o-ring, and membrane support.




© 2006 A+ Corporation, LLC. All rights reserved.

2

Install the 101-LOX-SS as shown.

Insert the four new 10-32 x 2" long Allen cap screws and tighten them securely. Reconnect the Model 101 into the sample system.

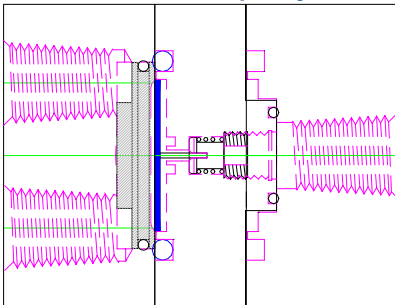

© 2006 A+ Corporation, LLC. All rights reserved.

3